

For customers wanting to use a wireless connection


Canon

When you want to save or print your images, the PowerShot SD430 DIGITAL ELPH WIRELESS / DIGITAL IXUS WIRELESS lets you transfer them to a printer or personal computer without using a cable.

The diagram below shows you an outline of how to set up a wireless connection and lists the user guides you should refer to in order to learn more detail.


Using a wireless connection to print images

1 Getting ready

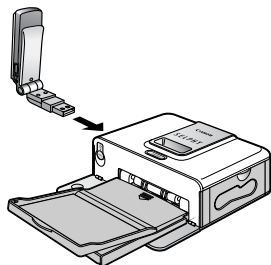


Attach the wireless print adapter (provided) to a Canon *PictBridge* compliant printer.

2 Setting up a wireless connection

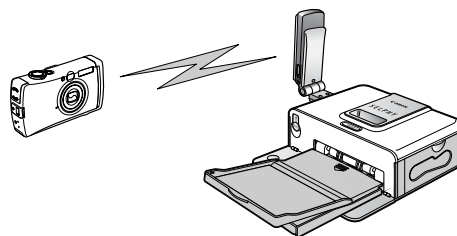

Start the wireless connection by operating the camera.

3 Printing

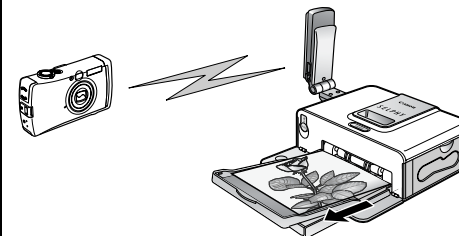

Print the desired images.



Advanced Camera User Guide



Direct Print User Guide

 



Direct Print User Guide



Setting up a wireless connection to a computer

If you set up a wireless connection to a computer, you can transfer images you have already taken to the computer, but you can also shoot images and transfer them to the computer immediately (Auto Transfer), automatically print out transferred images, and even operate the camera's shutter button from the computer.


1 Confirming a wireless connection to a computer

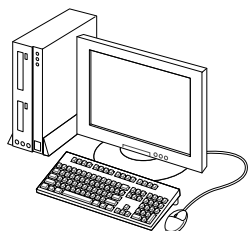

2 Installing the software provided

 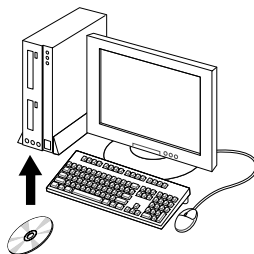


3 Registering the computer with the camera

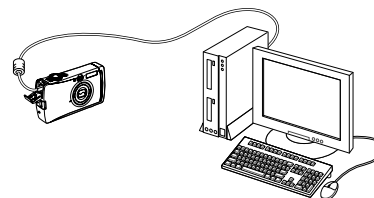

Connect the camera and computer using the supplied interface cable and register the computer with the camera (first time only).



4 Setting up a wireless connection

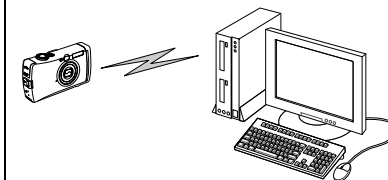

Start the wireless connection by operating the camera.



Software &
Wireless Guide

The user manual supplied
with your computer.



Software & Wireless Guide



- The wireless print adapter is for use only with Canon *PictBridge* compliant printers. Do not attach it to your computer.
- Connecting wirelessly between the camera and a computer is only possible with the Windows XP SP2 operating system.